

Replacement Parts

ITEM #	PART #	DESCRIPTION
①	CE057	INDICATOR LIGHT
②	CE266	IGNITION MODULE
	CE201	POTTED IGNITION MODULE (For LTXR Only)
③	CG056	WHITE ROGERS - NAT. GAS
	CG070	WHITE ROGERS - LPG.
④	CE058	TRANSFORMER
⑤	CE004	BLOWER MOTOR - MODELS 40,000 TO 80,000 BTU
	CE013	BLOWER MOTOR - MODEL 100,000 BTU
⑥	LE002	FLAME SENSOR ELECTRODE
⑦	LE001	SPARK ELECTRODE

ITEM #	PART #	DESCRIPTION
⑧	LG004P	BURNER CUP
	LG005	BURNER CUP ASSEMBLY (C/W ELECTRODES)
⑨	CH011	SIGHT GLASS ASSEMBLY
⑩	CE025	AIR SWITCH - MODELS LTA/LTX/LTXR - 40,000 BTU
	CE025	AIR SWITCH - MODELS LTA/LTX/LTXR - 60,000 BTU
	CE025	AIR SWITCH - MODELS LTA/LTX/LTXR - 80,000 BTU
	CE142	AIR SWITCH - MODELS LTA/LTX/LTXR - 100,000 BTU
⑪	CE010	POWER CORD
⑫	CE006	IGNITION WIRE

