

PARTS LIST

ITEM #	PART #	DESCRIPTION
①	CE057	INDICATOR LIGHT
②	CE109	IGNITION MODULE (FENWAL)
	CE005C	IGNITION MODULE (CNE)
③	CG142	HONEYWELL VALVE TRAIN REPLACEMENT KIT - NAT.
	CG143	HONEYWELL VALVE TRAIN REPLACEMENT KIT - LPG.
④	CE008	TRANSFORMER
⑤	CE117	BLOWER MOTOR (40,000-175,000 BTU)
	CE013	BLOWER MOTOR (205,000 BTU)
⑥	CE003	SENSE ELECTRODE
⑦	CE002	SPARK ELECTRODE

ITEM #	PART #	DESCRIPTION
⑧	UG001	BURNER CUP
	UG007	BURNER CUP ASSEMBLY (C/W ELECTRODES)
⑨	CH011	SIGHT GLASS ASSEMBLY
⑩	CE028	AIR SWITCH - MODELS - 40,000 BTU
	CE029	AIR SWITCH - MODELS - 60,000 & 80,000 & 100,000 BTU
	CE023	AIR SWITCH - MODELS - 125,000 & 175,000 BTU
	CE025	AIR SWITCH - MODELS - 150,000 BTU
	CE024	AIR SWITCH - MODELS - 205,000 BTU
⑪	CE010	POWER CORD
⑫	CE006	IGNITION WIRE (NOT SHOWN)

Table C: Burner Parts List



